

SAFETY

This equipment has been designed and manufactured to the highest international standards, but like all electrical appliances which are operated by mains voltage, care must be taken if you are to obtain the best results and safety is to be assured.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Do NOT use this appliance in bathrooms or where similar conditions of excessive moisture are present.
- Do NOT handle the appliance with wet hands.
- Do NOT use the appliance in an enclosed room so small that the heater will generate ambient temperatures in excess of 30°C.
- Do NOT use the appliance with young children unattended.
- Do NOT use the appliance in workshops or rooms where excessive dust is generated or present.
- Do NOT touch outlet grille when appliance is in use.
- Do NOT use the appliance if damaged.

If the appliance has been kept in freezing conditions, run at cold/fan setting for 5 minutes before using heat settings.

This appliance meets the requirements of EU Directive 89/336/EEC for EMC.

WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER

CLEANING

- Always disconnect the heater from the mains before cleaning.
- An occasional wipe over with a soft cloth is all that should be necessary.
- Do NOT use metal or furniture polish on any part of the heater.
- Do NOT touch the heater with wet hands or in any way bring water into contact with it.

IF YOUR HEATER DOES NOT WORK

- Check that the unit is wired correctly.
 - Check that the fuse has not blown in the connection unit.
 - If you are replacing a fuse a 13 Amp fuse, approved by ASTA to BS1362, must be used.
 - Check re-set of ES Control as described under Controls.
- Should none of the above remedies work, then disconnect heater from mains and consult an accredited Service Agent. If the appliance is still under guarantee, return it to your supplier.
- Do NOT attempt to repair the heater yourself.

GUARANTEE

This guarantee is offered to you as an extra benefit and does not affect your legal rights.

All electrical appliances produced for the Company are guaranteed for one year against faulty material or workmanship. This applies only if the appliance has been used for purposes in accordance with the instructions provided and has not been connected to an unsuitable electricity supply, or subject to misuse, neglect, damage or modified or repaired by any person not authorised by us.

The correct electricity supply voltage is shown on the rating label attached to the appliance.

CUSTOMER HELPLINE

Should you need any advice on the use of your new Consort product, or should you require service or repair, please contact our Helpline:

Operating hours: Mon to Thu 8.30am to 4.30pm | Fri 8:30am to 3:30pm

Consort Equipment Products Limited

Thornton Industrial Estate, Milford Haven, Pembrokeshire, SA73 2RT

Tel: 01646 692172 Fax: 01646 695195 Email: technical@consortepi.com Web: www.consortepi.com

CONSORT

Quality Space Heaters

Using and looking after your

HEATSTREAM

PLINTH HEATER

FOR WIRELESS ELECTRONIC CONTROLS

PHRX SERIES



Please read and retain these instructions

INSTALLATION RECOMMENDATIONS

It is recommended that careful thought be given to siting the appliance within the room. Try to avoid being directly in front of the heater for long periods. Consider where you may stand, at a work surface or the like. Position the heater to deliver the benefit of its warmth but not so as to overheat yourself.


The heater must not be located immediately below a fixed socket outlet.

INSTALLATION REQUIREMENTS

The appliance is designed to fit behind the plinth board and below the base shelf of a kitchen-type cupboard ie within the free plinth space. Figure 1 below shows the MINIMUM size cupboard unit into which the appliance may be fitted.

The appliance may be installed into a cupboard with dimensions larger than those given above.

Fig 1 (Min Cupboard Size)

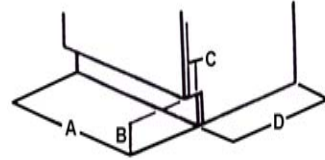

| UNIT REF | PHRX2 | PHRX3 |
|-------------------|------------|------------|
| A - Width | 500mm | 600mm |
| B - Plinth Height | 100mm | 100mm |
| C - Base Shelf | 75mm - max | 75mm - max |
| D - Depth | 500mm | 500mm |

INSTALLATION PROCEDURE

1. Cut a hole in the plinth board, to the dimensions given in Figure 2.
2. The power supply cable must be routed from the connecting unit into the plinth space. The cable shall be sufficiently long as to pass through the plinth space and plinth board. This enables the appliance to be subsequently withdrawn from the plinth if maintenance is required. Ensure no sharp edges are present along the power cable route.
3. The appliance can now be slid through the plinth board, until the fascia panel abuts the outside of the plinth board. Screw the fascia panel to the plinth board with the screws provided.
4. Connect the unit to the mains power supply in accordance with the appropriate section of these instructions.

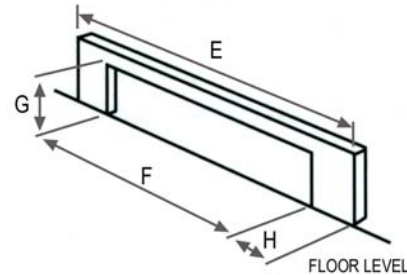



Fig 2 – Mounting Slot

| Model | E | F | G | H |
|-------|-----|-----|----|----|
| PHRX2 | 500 | 456 | 95 | 22 |
| PHRX3 | 600 | 540 | 95 | 30 |

To remove the appliance from the plinth space, should maintenance be required, disconnect mains power supply, unscrew fascia panel and slide out the appliance.

These dimensions are for a 500mm (PHRX2) and 600mm (PHRX3) wide by 100mm (min) high plinth. If the appliance is to be fitted into a plinth greater in length than specified then the hole shown in Figure 2 must be cut at least 22mm from one end.

AIRFLOW

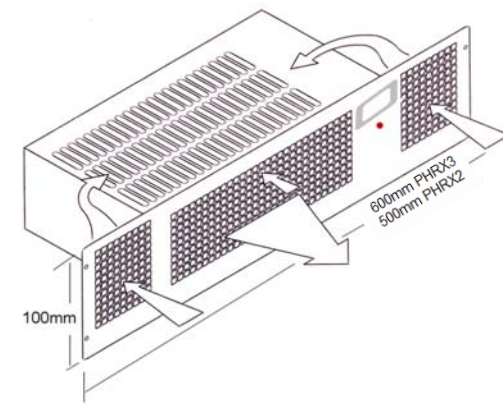

OPERATION

This heater can only be used when connected to a CRX2 wireless programmable timer. Each CRX2 can control any number of heaters. The heater has an indicator light positioned on the fascia. The light may be:

- Green - when no heat is needed
- Yellow - when some heat is needed to maintain the room temperature
- Red - when the heater is on full power
- Fast Flashing Red - when the heater has overheated and the Electronic Safety Control has switched the heater off.

Please refer to the CRX2 user and operating instructions for full operational details.

ELECTRONIC SAFETY CONTROL

The appliance is fitted with an electronic Safety Control (ES). This is a safety device which switches off the heater if, for any reason, the appliance overheats. Overheating is indicated by a fast flashing red light. The ES Controls can only be reset after the appliance has cooled down. In order to reset the ES Control proceed as follows:

1. Switch off appliance and leave for approximately 5 minutes.
2. Switch on appliance and the ES Control will reset.
3. Ensure that the appliance is functioning correctly. If the ES Control operates again, the appliance should be checked by a competent electrician.

CONNECTION TO THE MAIN SUPPLY

Electrical installation should be carried out by a competent installer, preferably registered with NICEIC (National Inspection Council for Electrical Installation Contracting) in accordance with the 16 edition of the IEE Wiring Regulations, (BS.7671), and any relevant Local Authority by-laws.

This heater is fitted with a 3-core mains supply cable and should be permanently connected to the electricity supply via a double pole switch having 3 mm gap on each pole.

A switched Fused Connection unit to BS.1363 Part 4 is a recommended mains supply connection accessory to ensure compliance with safety requirements applicable to fixed wiring installation.